


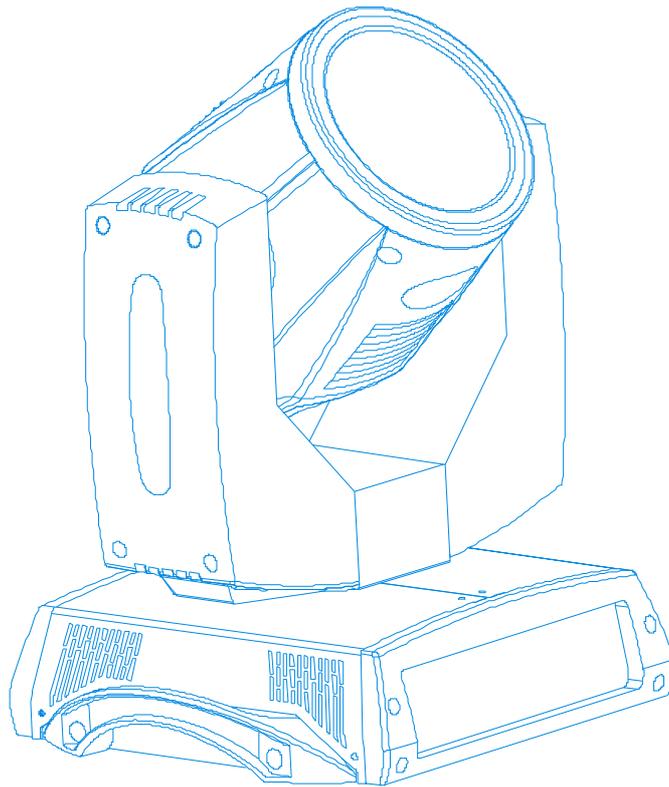

EXX-ML Beam 10R 280W



WEIGHT: 17.5KG

COLOR TEMPERATURE: (8400K)

POWER: (280W)

Item

Item	2
1. Product introduce	4
1.1 Fixture Size.....	4
2. Safety information	4
2.1 Anti-high temperature	5
2.2 Burst Prevention	5
2.3 To prevent falling wounding	5
2.4 UV protection and the bulb explosion	5
2.5 Prevention of electric shock	6
2.6 to prevent burning or fire	6
3. Packing and shipping	6
3.1 packaging randomized accessories project	6
3.2 transport the protection locks.....	7
3.3 device packaging	7
3.4 Unpacking.....	7
4. Installation standards	7
4.1 device fixed to the bracket	7
4.2 rigging installation	7
4.3 connected devices.....	8
5. AC power	8
5.1 Fuse.....	8

5.2 Power connection.....	8
6. Lamp.....	9
6.1 Bulb Description	9
6.2 changing a light bulb.....	9
7. Control Panel.....	10
7.1 Introduction.....	10
8.EXX-ML Beam 10R 280W CONTROL	10
9. EXX-ML Beam 10R 280W Channel	13

STATEMENT

The product is good packing when ship out the factory. All users should strictly abide by the warnings and instructions stated in this manual, any damage and results due to misuse and the neglect of this operating manual will be excluded from the deal responsibility this manual will not informed in additionally if have technical changes.

DISPLAY PRODUCTION DESCRIPTION

Thank you for choose this EXX-ML Beam 10R 280W products, this model is the moving head light which is the latest development of the smart, efficient products, beautiful shape, smooth R & D, combined with the advanced technology of today's stage lighting products with international advanced electronic control technology and excellent user-friendly industrial design , fully comply with CE standard, accepted international standard DMX512 signal mode.

This moving head lights, use ceramic luminescent film reflector as a condenser system, coupled with the high-quality optical lens components, broadband voltage, a clear pattern, sharp and uniform output light efficiency. Intelligent LED display module, the English language selection mode, intuitive operating menu, shortcut.

EXX-ML Beam 10R 280W, have 16/20 international standard DMX512 channels optional Horizontal scan: 540 ° vertical scanning 270 ° (16bit precision scanning) electronic correction, dot-matrix display, four touch switch LCD + single-Key flying shuttle can spin. The can be inverted 180 °, the color wheel is combined with white and 14 colors. Gobo wheel: 7 patterns + white effect round by eight prism and atomization function. 0-100% mechanical dimmer, support mechanical strobe and variable strobe effect, strobe macro function. The optical system of the lens group electric focusing, the beam angle of 0 to 4 ° with overheating protection function Moving head lights are widely used in television, disco, dance halls, nightclubs, large-scale performances and other professional venues

1. PRODUCT INTRODUCTION

1.1 BEAM SIZE

Size: 395 (L) × 287 (W) × 495 (H) mm
Net Weight: 17.5KG

2. SAFETY INFORMATION

Safety warning message

This product is only suitable for professional use, and does not apply to security for other purposes. After you got the lights, please check the package whether have any damage caused by transportation. If there is any damage, do not use this fixture, and please contact the dealer or

manufacturer as soon as possible.

This product is only suitable for indoor, IP20 protection class. Lamps should be kept dry to avoid Moisture, overheating or dusty environment. Prevent lamps come into contact with water or any other liquid.

The use of this product should pay attention to: fire, heat, electric shock, ultraviolet radiation, the lamp to explode or

Shedding caused serious or fatal injury.

Need to read the instructions before use energized or installing.

Follow through the operation of security methods and pay attention to the warning signs on the specification and equipment. If you have any problem for how to safely operate the equipment.

Please contact your dealer.

2.1 ANTI -HIGH TEMPERATURE



$T_a = 40$

Please don't use the equipment if the temperature above 40°C

2.2 BURST PREVENTION



The lens should be changed if had damaged or any problems. Don't change the non-original manufacturer lens.

Len size: $\varnothing 136 \times 60$ mm

2.3 TO PREVENT FALLING WOUNDING



Please don't move the package by oneself.

When Hang the fixture, please must verify that the facilities to be able to withstand the weight of the lamps at least 10 times more.

Please make sure the Mounting hardware is strong enough no any damage, and insurance for the safety rope as auxiliary security fixed in other facilities will need to verify before installation. Installing or removing the equipment, to make the pulley below the work location

2.4 UA PROTECTION AND THE BULB EXPLOSION

Prohibit straight viewpoint with exposed bulbs to avoid UV damage to the eyes;
Do not use the equipment without the lens screen and the lid;

The lens and the light head covers should be timely replaced if any damage to rupture
The Fixture should be used with the protection screen together.

2.5 PREVENTION OF ELECTRIC SHOCK




The electrical connection must only be carried out with corresponding qualifications;
Before installing, make sure you use the power voltage lamps must comply with the identified power, voltage and have an overload or leakage protection;
Each lamp must be properly grounded, installed in accordance with the relevant standards; 
Cut off the power when stall or replace the lamp and the fuse; 
Prohibit the use of a lightning storm or wet environment.

2.6 TO PREVENT BURNING OR FIRE



1. The fixture can be mounted directly on the surface of ordinary combustible

material. 

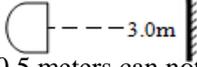2. Do not short-circuit temperature protection switch or fuse, use the specified type of fuse.
3. The equipment must be installed away from inflammable and explosive materials.
4. The equipment should be projected range of 3 meters away objects and projectiles temperature less than 60 ° C; --- 3.0m. 
5. Fan or ventilation, at least in the range of 0.5 meters can not be an obstacle.
6. Do not place any object on the lens.
7. Handling at least allow the device to cool for 20 minutes.
8. Do not replace the non-original parts.



3. PACKAGE

3.1 ATTACHMENT

Beam200 packed with fly-case of one in one ,two in one ,or carton box.
Attach follow accessory.

ACCESSORY

CONTENT	QUANTITY
USER MANUL	1
SAFTY ROPE	1
HANG FIXTURE	2
SIGNAL CABLE	1

PACAKGE SIZE

CARTON BOX	410*490*600
FLY-CASE 1 IN 1	690*470*430

FLY-CASE 2 IN 1	985*450*735
-----------------	-------------

3.2 TRANSPORT PROTECT LOCK

In order to protect the light, there is a protect lock; During the transport , the lock will closed keeping the item in safety state.

3.3 ABOUT PACK STAGE

1. Before packed, make sure power is off, and wait for at least 20mins for cooling down.
2. Before clean the fixture, make sure X, Y axis protect lock closed.
3. After packed by plastic bag, high-lift the fixture with two handles besides the product. put the product into the fly-case up-side-down.
4. After packed the product, put the accessory into the accessory case, then closed and lock the fly-case.
5. Fly-case only up stacked two layers. Prohibited upside down. 
6. When packed with carton box, equipment should be put into the foam first, then set into a carton, pay attention to the vertical position.

3.4 UNPACKING

Note: Before unpacking check the damage is whether due to the transportation or not, if you find any such damage, please do not use this item, and contact with the dealer or manufacturer as soon as possible.

1. Open the fly-case, and discover the inside plastic bag.
2. High-lift the product by two handles beside the bottom base and move it out.
3. Before power on, make sure you have opened the X, Y axis lock!

4. INSTALL STRANDARD

4.1 INSTALL LOCK

EXX-ML Beam 10R 280W can be placed on the stage, or mounted in an arbitrary direction of the truss. Two fast locks system could fix the item easily

4.2 EQUIPMENT FIXED

1. Before installation must verify the fast lock is keep in good state, and can withstand at least 10 times the weight of product. Verify that the building can withstand at least 10 times of the total weight of the product and accessory equipments.
2. Fix the hang fixture into the hole, which located on the base of the price.
Seize handle of fasteners, clockwise rotate 1/4 turn and lock. Installed other one fastener in the same method.
3. Using the safety cable which can withstand 10 times the weight of the equipment.
4. Make sure the X,Y protect locks are opened, Verify that within 3 meters there is no

combustibles .

WARNING



Fixture must use two fixing devices, and make sure the fixing device have locked! And only fully clockwise rotate 90 ° can lock the hang fixture! Do remember plus a safety rope, and do not connect the safety rope to plastic handle. It should be connect to the hole on the base!

4.3 FIXTURE CONNECT



Attention! One product only can accept one input one output.

EXX-ML Beam 10R 280W DMX cable include 3 contact pins:

Pin 1, FOR GROUND; Pin 2 connected to the negative polarity signal; The pin 3 connected to the positive polarity signal.

DMX512 cable must use the professional shielded twisted pair cable; standard loudspeaker cable is not reliable to control the long-range data. 24AWG cable is suitable for more than 300 meters long-distance signal transmission and must add DMX 512 signal amplifier.

Do not use two outputs to separate the connection, if separate a continuous connection to branch, DMX512 splitter is necessary.



Attention! Do not overload the connection. One continuous connection can only connect up to 32 devices.

If use the DMX512 splitter. At first connect DMX512 Splitter input terminal to controller .And then connected from the splitter output terminal to next device.

Do as above guide to connect other device, and finally coupled with terminal insertion

5. ALTERNATING CURRENT POWER SUPPLY

5.1 VOLTAGE, POWER, FUSE SPECIFICATION

Input Voltage	Total Power	Frequency
110~240V	280W	50/60Hz

Fuse voltage	Electronic current	Specification
250V	6A	5×20

5.2 POWER PROTECT

The equipment must be operated by professionals; Make sure that the voltage of power supply must be comply with the voltage identified on the lamp, and must have an overload or leakage electrical protection.

ATTENTION!



Factory has equipped the standard 3 pin plug socket. Connect the power supply as below table.

If lamp cable is damaged, replacement should be operate by factory or qualified staff. Any question, please contact professionals or talk to a qualified electrician.

Live wire(L)	Null(N)	Ground wire	
RED	BLUE	Yellow +Green	

6. LAMP

6.1 LAMP DESCRIPTION

LAMP MODEL	POWER OF LAMP	LIFE/HOUR	COLOR TEMPERATURE
YODN 10R	280W	2200 HOURS	8400K



WARNING! There is a safety hazard or damage if install similar bulb
To reduce the risk of damage to light ,do change the lamp before using time over 125% of lamp life .

6.2 LAMP REPLACE

Attention! When replace the lamp is forbidden to touch lamp with bare hand, to avoid the greasy dirt stains filament. filament must be kept clean



1. Disconnect the power. Before replace lamp, fixture need 20 minutes for lamp cooling. Fasten the head with Y axis protect lock in 60 ° position.
2. Use cross screwdriver to open the light body cover, remove the fan bracket, pull out the bulb cable
3. Open stainless steel tablet holder with one hand and the use other hand to pull out the bulb at oblique 15 °
4. Install the lamp

7. CONTROL PANEL

7.1 CONTROL PANEL INTORUCTION



Display: to display all information of fixture.

Control wheel: can turn right, left and enter.

8. EXX-ML Beam 10R 280W CONTROL

Main Menu	Submenu 1	Submenu2	Function SET	Function description
Address			1-512	Address number set
Display	"ShowReve"		"Natu"	Normal
			"Revl"	reverse 180°
	"LightSet"		1%-100%	Brightness set
	"LightOff"		"1MIN "	Backlight close after delay 1Min
			"2MIN "	Backlight close after delay 2Min
			"3MIN "	Backlight close after delay 3Min
			"Ligh"	Backlight light always
	"MenuBack"		"1MIN "	Menu back to mainmenu after delay 1Min
			"2MIN "	Menu back to mainmenu after delay 2Min
			"3MIN "	Menu back to mainmenu after delay 3Min
			"Off "	Menu back not automatic
	"LightFlh"		"On "	Back ground flash, open
			"Off "	Back ground flash, closed
	"Return "		▲	return
"Special "	"PT Setup"	"Pan Reve"	"Off "	PAN SCAN Normal
			"On"	Pan Scan Reverse
		"Tilt Reve"	"Off "	Tilt Scan normal
			"On"	Tilt Scan Reverse
		"OptpChek"	"Off "	PAN/TILT optical sensor testing off
			"On"	PAN/TILT optical sensor testing on
	"Return "	▲	Return	
	"Shortcut"		"Off "	Shortcut off for colors and gobos
			"On"	Shortcut open for colors and gobos
	"FullColo"		"Off "	half color function
			"On"	full color function
	"ChanlMod"		"Simp"	Simplify mode
			"Stan"	Standard mode

		"Slve"	Accept other signal control
	"Run Mod "	"Auto"	Inside program Run automatically
		"Soud"	Sound active
	"SinglClr"	"Off "	keep signal data
		"On"	clear signal data
	"SinglRst"	"Off "	Close other signal control reset
		"On"	Open other signal control reset
	"Return "	▲	Return
"LampSet"	"Lamp Def "	"Off "	Lamp off
		"On"	Lamp on
	"ManuLamp "	"Off "	Lamp off by manual
		"On"	lamp on by manual
	"LampTime"	0000-9999	Lamp time
	"LampStat"	"Off"	Lamp off
		"On"	Lamp on
	"LampOff"	"10M"	lamp off when no signal after 10mins
"Ligh"		lamp on(turn off lamp off automatic)	
"Return "		▲	Return
"InfoCheck "	"LightMod"	Beam	light model
	"Fan1Stat"	Righ/Erer	Fan1 State
	"Fan2Stat"	Righ/Erer	Fan2 State
	"WorkCoun"	0000-9999	Open times memo
	"SpareCon"	Most	Setting the Max time the light can power on and off
	"WorkHour"	0000-9999	working hours memo for connect power
	"SpareTim "	Most	Setting the Max time the lamp can used
	"DisVersi "	V008	Version
	"Return "		▲
"Control "	"Color"	0-255	Control the Channels
	"Shutter"		
	"Dimmer"		
	"StaticGB"		
	"Prism"		
	"PrismRot"		

	"Eff Fun"				
	"Frost"				
	"Focus"				
	"Pan"				
	"Pan Fine"				
	"Tilt"				
	"TiltFine"				
	"Reservel"				
	"DMXReset"				
	"DMXLamp"				
	"PT Speed"				
	"ColourSP"				
	"Focus SP"				
	"Gobo SP"				
	"Return "		▲	Return	
"AssiTool"	"FacCofig "		★	Password input Enter	
			"Eprt"	Recover Factory set	
			"Save"	Save factory set	
	"DefCofig"		★	Password input Enter	
			"Eprt"	Recover to default	
	"Redress "	"Pan"	0-255		Pan , standardizing
		"Tilt"			Tilt , standardizing
		"StaticGB"			Static Gobo , standardizing
		"Colour"			Colour , standardizing
		"Focus"			Focus , standardizing
		"Return "		▲	Return
	"ChanlDef"			Channel Custom(not open for customers)	
	"FacSett"		★	factory setting(not open for customers)	
"Checksum"			Check Cabrilate data (need password)		
"Return "		▲	Return		
"ChanlVal"			Chanl 00-Chanl 20	DMX value number	
"All Rst"			"Off"	Cancel	
			"On"	Reset	
			▲	Exit	

"ExitMenu"				
------------	--	--	--	--

9. EXX-ML Beam 10R 280W Channel

Channel	DMX No	Content
1CH Color	0-4	White
	5-8	White+Color1
	9-12	Color1
	13-17	Color1+Color2
	18-21	Color2
	22-25	Color2+Color3
	26-29	Color3
	30-34	Color3+Color4
	35-38	Color4
	39-42	Color4+Color5
	43-46	Color5
	47-51	Color5+Color6
	52-55	Color6
	56-59	Color6+Color7
	60-63	Color7
	64-68	Color7+Color8
	69-72	Color8
	73-76	Color8+Color9
	77-81	Color9
	82-85	Color9+Color10
	86-89	Color10
	90-93	Color10+Color11
	94-98	Color11
	99-102	Color11+Color12
	103-106	Color12
	107-110	Color12+Color13
111-115	Color13	
116-119	Color13+Color14	
120-123	Color14	
124-127	Color14+White	
128-191	Slow to fast, color flowing	
192-255	Fast to slow, color flowing	
2CH Strobe	0-2	White
	3-103	Slow strobe to fast strobe
	104-107	White

	108-207	Fast strobe to slow strobe
	208-212	white
	213-225	Free strobe ,slow
	226-238	Free strobe ,middle
	239-251	Free strobe ,fast
	252-255	White
3CH Dimming	0-255	0-100%
4CH Gobo	0-3	White
	4-7	Gobo1
	8-11	Gobo2
	12-15	Gobo3
	16-19	Gobo4
	20-23	Gobo5
	24-27	Gobo6
	28-31	Gobo7
	32-35	Gobo8
	36-39	Gobo9
	40-43	Gobo10
	44-47	Gobo11
	48-51	Gobo12
	52-55	Gobo13
	56-59	Gobo14
	60-63	Gobo15
	64-67	Gobo16
	68-71	Gobo17
	72-112	Gobo change ,slow to fast
	114-117	Stop
	118-159	Gobo change ,fast to slow
	160-166	Gobo2,shaking slow to fast
	167-172	Gobo3,shaking slow to fast
	173-179	Gobo4,shaking slow to fast
	180-185	Gobo5,shaking slow to fast
	186-191	Gobo6,shaking slow to fast
	192-198	Gobo7,shaking slow to fast
	199-204	Gobo8,shaking slow to fast
	205-211	Gobo9,shaking slow to fast
	212-217	Gobo10,shaking slow to fast
	218-223	Gobo11,shaking slow to fast
	224-230	Gobo12,shaking slow to fast
	231-236	Gobo13,shaking slow to fast
	237-243	Gobo14,shaking slow to fast
	244-249	Gobo15,shaking slow to fast
	250-255	Gobo16,shaking slow to fast

5CH Prism	0-127	White
	128-255	Prism1+Prism2 option
6CH Prism Rotate	0-127	Angle 0-540°
	128-190	Slow rotate to Fast rotate
	191-192	stop
	193-255	Fast rotate to Slow rotate
7CH MACO effect	0-255	Maco effect
8CH Frost	0-255	0-100% Frost
9CH Focus	0-255	0-100% Focus
10CH X	0-255	540°
11CH X fine	0-255	1.8°
12CH Y	0-255	270°
13CH Y fine	0-255	1.8°
14CH Empty	0-11	Empty
15CH Reset	126-130	Reset
16CH Lamp	60-65	Off
	175-180	On



PRODANCE, s.r.o.
 Osadní 799/26, 170 00 Praha 7
 T: 220 806 054 E: info@prodance.cz
 www.prodance.cz